SimSpray 3.x Tech Specs

Category		Description						
Weight		Unit Only:	145 lbs (w/o blaster) 158 lbs (w/ blaster)			66 kg (w/o blaster) 72 kg (w/ blaster)		
		Pallet Pack Container: (DuraGreen)	224 lbs (w/o blaster) 239 lbs (w/ blaster)			102 kg (w/o blaster) 109 kg (w/ blaster)		
Dimensions (W x D x H)		In Use:	51"x 25" x 81"			1.2954 x 0.635 x 2.0574 m		
		Closed:	24.5" x 25.25" x 48"		0.6223 x 0.6414 x 1.2192 m			
		Pallet Pack Container: (DuraGreen)	48" x 57" x 34"			1.2192 x 1.4478 x 0.8636 m		
Working Space (Zone) Dimensions (W x D x H)			Minimum: 10' x 11' x 10'			Minimum: 3.048 x 3.3528 x 3.048 m		
			SimSpray unit and for user movement. Admins can select trackable zones from			6.7' x 6.7'	2.0422 x 2.0422 m	
		Ideal Open Space:				12.5' x 15.7'	3.81 x 4.7854 m	
						12.5' x 25'	3.81 x 7.62 m	
		See the Positioning section of the Quick Start Guide. Minimize reflections or infrared interference. SimSpray uses a camera based tracking system. Cover sources of IR (Infrared) interference, turn off infrared emitting devices, or reposition or move the system.						
Power Requirements		Input Voltage	Input Frequency	Current		Misc.		
	US	120 VAC	2-5 Amps 50-60Hz (In-Use: 2 Amps.			Standard, 3-pronged, bladed, household outlet		
	INTL	100-250 VAC	30-00112	(In-Use: 2 Amps, Max: 5 Amps)		Regional power plug adapter included		
Peripherals		VRSim Spray Gun, Powder Gun, and/or Abrasive Blasting Gun (motion tracked) (supports 1 active user at a time)						
		VIVE Pro (motion tracked first-person perspective video) (2880 x 1600 resolution, 90 Hz, 110° field of view)						
		Touchscreen (touch interface and video) (1080p, 1920x1080 resolution, 60 Hz)						
		Speakers (sound)						
Motion Tracking		Infrared						
Available External Device Connections		HDMI video to an additional external display (TV or Projector). SimSpray outputs 1080p (widescreen 1920x1080 resolution, progressive mode) at 60 Hz. Additional external display and cabling not included but recommended if showing to 4+ people at the same time.						
		USB flash drive. Instructor USB included to collect Student Reports (PDFs), Lesson Progress (CSV), and Paintometer® summary (CSV). Optionally, students and trainees may want their own USBs, not included. System supports 1 USB inserted at a time. Use a non-SimSpray computer to distribute (email), print, make copies of, and/or delete Student Reports from Student Report USB(s).						
Technical Support Needs		Wired internet connection preferred, wireless available. Requires connecting the included Computer and Mouse. Ethernet cabling not included. SimSpray normally operates offline, disconnected from any network. Software updates and tech support may require an additional USB and non-SimSpray computer with internet access and access to download files (e.g., Dropbox).						

Note: Specs are subject to change and may be replaced with comparable hardware or system.